


## A. Model 115.1

### Removal

---

- 1 Remove instrument cluster.
- 2 Unscrew pull knob and rosette and pull preglow starter switch (1) into range of combination cutout.
- 3 Unscrew cable control (3) from steering lock switch (2).
- 4 Loosen start and stop control (5) to injection pump on preglow starter switch and disconnect.
- 5 Pretension cable control with cap nut (4), disconnect on preglow starter switch and unscrew.
- 6 Disconnect electric lines.

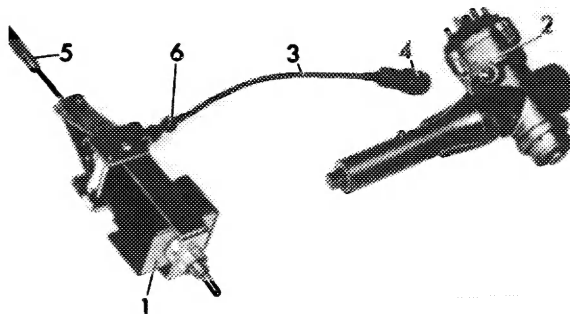

- |                           |                          |
|---------------------------|--------------------------|
| 1 Preglow starter switch  | 5 Start and stop control |
| 2 Steering lock switch    | 6 Adjusting screw        |
| 3 Cable control           |                          |
| 4 Cap nut M 10            |                          |
| Part no. 001 587 01 00 01 |                          |

154-9749

### Installation

---

- 7 For installation proceed vice versa.

#### Connection of electric lines:

Color red/black	Terminal 54	2.5 mm <sup>2</sup>
Color purple/white	Terminal 50a	2.5 mm <sup>2</sup>
Color purple/white	Terminal 17	4 mm <sup>2</sup>
Color purple /blue	Terminal 19	4 mm <sup>2</sup>


## B. Model 123.1

### Removal

- 1 Remove start and stop control on injection pump and Bowden wire for idle speed adjuster on guide lever at cylinder head cover.
- 2 Remove pull-push knob on instrument panel. For this purpose, insert a wire through bore of pull-push knob and press off cover.
- 3 Unscrew hex nut and remove pull-push knob.
- 4 Unscrew fastening nut on instrument panel and pull out preglow starter switch with Bowden wires in downward direction.

### Attention!

Avoid buckling of Bowden wires.

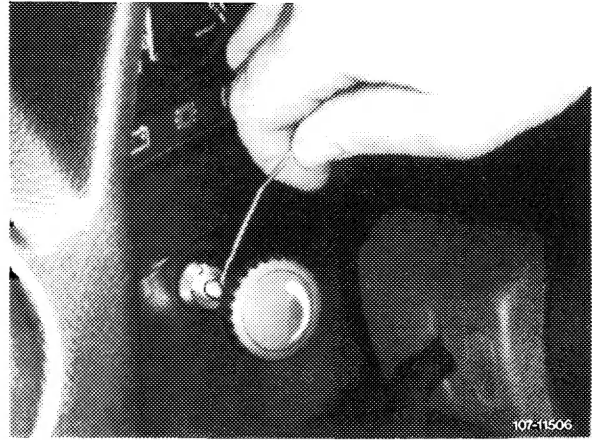


### 5 Remove Bowden wires.

- a) Remove start and stop control (1). For this purpose, force off lock (4).
- b) Remove Bowden wire for idle speed adjuster (2). For this purpose, remove clamp (3), unscrew wire coil, lift slightly and pull out.


1 Start and stop control  
2 Bowden wire for idle  
speed adjuster

3 Clamp  
4 Lock

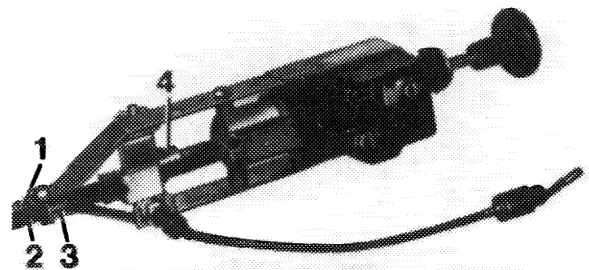

107-11304

### 6 Unscrew cable control (4) on steering lock switch (2).

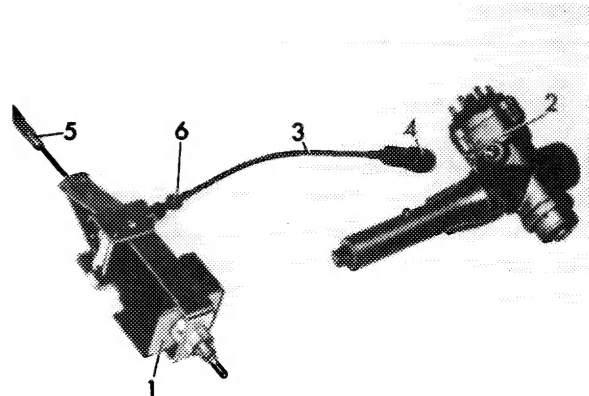

154-9749

7 Disconnect electric lines and remove preglow starter switch.

## **Installation**

---

8 For installation proceed vice versa.

Connection of electric lines:

Color red/black	Terminal 15/54
Color purple	Terminal 19
Color purple/white	Terminal 50